



Hewlett Packard
Enterprise

ClearOS and ClearVM Software Information for HPE Servers

Part Number: P09468-001
Published: June 2018
Edition: 1

Notices

The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein.

Confidential computer software. Valid license from Hewlett Packard Enterprise required for possession, use, or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

Links to third-party websites take you outside the Hewlett Packard Enterprise website. Hewlett Packard Enterprise has no control over and is not responsible for information outside the Hewlett Packard Enterprise website.

Acknowledgments

ClearCenter, ClearOS, and ClearVM are either registered trademarks or trademarks of ClearCenter Inc. in the United States and/or other countries.

Linux[®] is the registered trademark of Linus Torvalds in the U.S. and other countries.

Microsoft[®] and Windows[®] are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Contents

- ClearOS and ClearVM Software Information for HPE Servers.....4**
 - ClearOS/ClearVM USB installation key..... 4
 - RAID configuration in ClearOS..... 4
 - Booting other media.....4
 - ClearOS default login information.....4
 - ClearOS and ClearVM subscriptions..... 5

- ClearOS and ClearVM support and other resources..... 6**
 - ClearCARE technical support..... 6
 - ClearCenter contact information..... 6
 - ClearOS community forum.....7
 - ClearOS documentation websites.....7

ClearOS and ClearVM Software Information for HPE Servers

ClearOS and ClearVM is available with supported HPE servers (<http://www.hpe.com/servers/clearoscert>).

ClearOS is an intuitive operating system with over 100 intelligently integrated applications and services. ClearVM is an intuitive physical server and virtual machine management software. There is no upfront cost of ClearOS or ClearVM—you pay only for the software and support you value or need.

ClearOS and ClearVM is available for USB install on select servers. You can also download ClearOS and ClearVM from <http://www.hpe.com/servers/clearos>.

ClearOS is also available for preload and can be downloaded through Intelligent Provisioning.

For more documentation on configuring ClearOS, see <http://www.hpe.com/info/ClearOS-docs-en>.

ClearOS/ClearVM USB installation key

When first powered on, servers with the ClearOS/ClearVM USB installation key display the option to install ClearOS or ClearVM.

If this option does not display, do one of the following:

- Select the internal USB as the boot device. To display the one-time boot menu screen, press **F11** on the POST screen.
- Download and install the ClearOS or ClearVM installation file from <http://www.hpe.com/servers/clearos>.

RAID configuration in ClearOS

ClearOS does not support the embedded HPE Smart Array controller (B140i for Gen9 servers, S100i for Gen10 servers). To configure drive arrays, use another HPE storage controller or use the software RAID included with ClearOS.

Booting other media

Use the ClearOS/ClearVM USB installation key main menu to set your preferred boot sequence. To set the boot sequence for all boots, press **F9** to access the BIOS setup utility, and then go to the **Boot** menu. To select an option for a one-time boot override, press **F11** to access the One-Time Boot menu. To use Intelligent Provisioning, press **F10** to reboot the server into the Intelligent Provisioning interface.

ClearOS default login information

In HPE servers preloaded with ClearOS, the default ClearOS login information is as follows:

- User name: `root`
- Password: `password`

After the installation is complete, change the password in the Webconfig user interface. To change the password, select the profile for the root user on the upper-right corner of the Webconfig screen.

For detailed ClearOS installation instructions, see the *ClearOS 7 on HPE ProLiant Servers Configuration Guide* at <http://www.hpe.com/support/ClearOS-IG>.

ClearOS and ClearVM subscriptions

To purchase subscriptions for ClearOS Business edition, go to <http://www.hpe.com/servers/clearos> or <http://www.clearcenter.com/partners/hpe>.

To purchase subscriptions for ClearVM, go to <http://www.clearcenter.com/partners/hpe>.

ClearOS and ClearVM support and other resources

ClearCARE technical support

Support for ClearOS and ClearVM is not provided by Hewlett Packard Enterprise. Support for ClearOS and ClearVM is purchased and delivered by ClearCenter. You can purchase single support incidents by submitting a support ticket to ClearCenter, or you can purchase a Bronze, Silver, Gold, or Platinum ClearCARE subscription. For more information, go to the ClearOS website:

<https://www.clearos.com/>

Several levels of professional technical support are available to licensed users. For more information, go to the ClearCARE support website:

<https://www.clearos.com/products/support/clearcare-overview>

ClearCenter contact information



North America

Phone: +1.800.977.0574

Email: sales@clearcenter.com

International


Phone: +1.801.851.5555

Email: sales@clearcenter.com

ClearOS community forum

ClearOS is driven by an engaged and rapidly growing community. Community members help one another set up, develop, troubleshoot, and push the boundaries of ClearOS. Get started by participating in the community.

<https://www.clearos.com/clearfoundation/social/community>

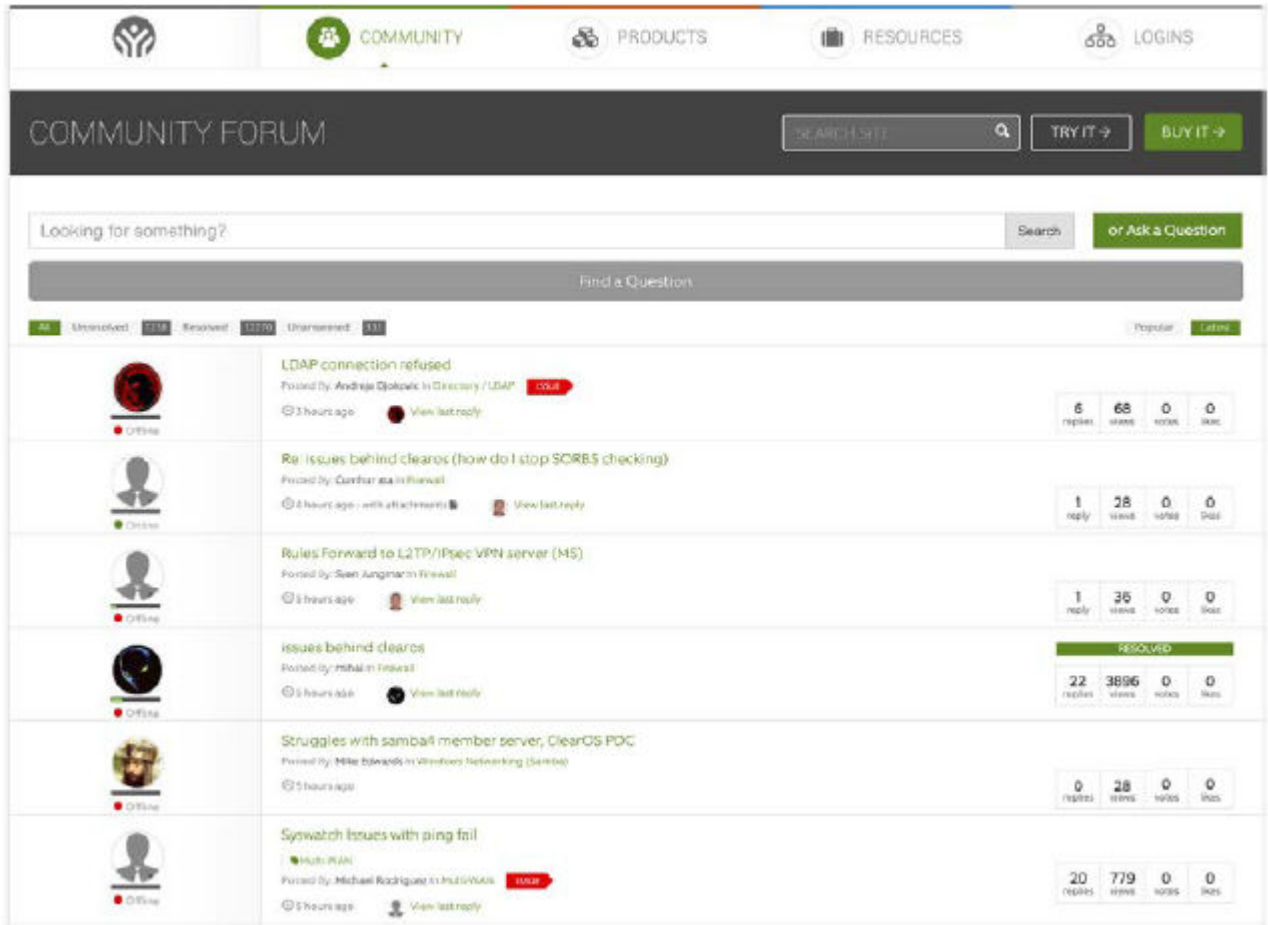

ClearOS documentation websites

For online user guides and how-to documents, community sites and forums, technical support, and search engine information, see:

- <https://www.clearos.com/resources/documentation/documentation-overview>
- <http://www.hpe.com/info/ClearOS-docs-en>