



# Hewlett Packard Enterprise

## DAC Installation Instructions

### Abstract

For QSFP+/QSFP28, SFP+/SFP28 DAC

© Copyright 2018 Hewlett Packard Enterprise Development LP

Part Number: P09632-001  
Published: July 2018  
Edition: 1

---

### Installation information

When handling installing or removing cables, be careful not to bend or twist the cable beyond the minimum bend radius.

**⚠ CAUTION:** Exceeding the minimum bend radius measurement may cause immediate or latent failure of the cable.

---

---

### Minimum bend radius for QSFP28/QSFP+ DAC cables

Length	Minimum bend radius
0.35 m	6.9 cm (2.72 in)
0.5 m	6.9 cm (2.72 in)
1 m	6.9 cm (2.72 in)
3 m	7.4 cm (2.91 in)
5 m	8.4 cm (3.31 in)

---

### Minimum bend radius for SFP28/SFP+ DAC cables

Length	Minimum bend radius
0.35 m	4.5 cm (1.77 in)
0.5 m	4.5 cm (1.77 in)
1 m	4.5 cm (1.77 in)
3 m	4.7 cm (1.85 in)
5 m	5.2 cm (2.05 in)

---

## Minimum bend radius for QSFP28 to 4xSFP28/QSFP+ to 4xSFP+ DAC cables

Length	Minimum bend radius
0.35 m	4.5 cm (1.77 in)
0.5 m	4.5 cm (1.77 in)
1 m	4.5 cm (1.77 in)
3 m	4.7 cm (1.85 in)
5 m	5.2 cm (2.05 in)

---

## Installing a cable

### Procedure

1. Remove the packaging and protective caps from the cable, if needed.
2. Verify that the cable is the correct type by checking the label.
3. Remove the dust plug from the correct port.
4. Align the metal cable plug in front of the port with the matching orientation.
5. Install the cable.

---

## Documentation feedback

Hewlett Packard Enterprise is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback ([docsfeedback@hpe.com](mailto:docsfeedback@hpe.com)). When submitting your feedback, include the document title, part number, edition, and publication date located on the front cover of the document. For online help content, include the product name, product version, help edition, and publication date located on the legal notices page.