

# How to reset the bmc password

Published 09/10/2013

## Symptom(s):

How to reset the bmc password

## Fact(s):

BMC

ipmitool

## SGI Solution:

From the linux prompt. You must be logged in as root.

```
/usr/bin/ipmitool shell
```

```
ipmitool> user list 1
```

ID	Name	Callin	Link Auth	IPMI Msg	Channel Priv Limit
1		true	true	true	USER
2	ADMIN	true	true	true	ADMINISTRATOR
3	admin	true	true	true	ADMINISTRATOR
4	root	true	true	true	ADMINISTRATOR

To change the bmc's password for user "admin", run:

```
ipmitool> user set password 3 new_password
```

## Answers others found helpful

- [Default BMC IP address configuration](#)
- [How to reset the bmc password on a Supermicro X8DAH or X8DTG-DF motherboard](#)
- [Unable to create/reset ipmi user/password after systemboard replacement](#)
- [How to set up a RMM 3 login using ipmitool](#)
- [Setting up the BMC on SGI Rackable C1110-RP6 Servers](#)

## Additional Details

<b>Creation Date</b>	09/13/2010 06:46 AM
<b>Last modification</b>	09/20/2015 12:19 AM
<b>Published Date</b>	09/10/2013
<b>Products</b>	<ul style="list-style-type: none"><li>• Servers and Clusters</li><li>• SGI UV</li><li>• SGI UV 2000</li><li>• SGI UV 20</li><li>• SGI UV 1000</li><li>• SGI UV 100</li><li>• SGI UV 10</li></ul>
<b>Categories</b>	<ul style="list-style-type: none"><li>• Knowledgebase</li><li>• How To/Question</li></ul>